

# Vejledning til vinrumskøling med MWR-WG00JN

Fjernbetjeningen kan som standard ikke gå ned til mere end 16°C og derfor er det nødvendigt at lave en forskydelse af rumtemperaturen for at kunne opnå fx 10°C i et vinrum.



## Step 1: Service mode:

Ændringer i fjernbetjeningen foretages i *Service mode*. *Service mode* tilgås fra startskærmen, hvor **pil op og pil ned** holdes inde samtidigt i mere end 3 sek. Herefter er det være muligt at indtaste en kode.

Koden er **0202**

 
 
 
 
 

## Step 2: Følervalg:

Standard benyttes føleren altid i indedelen. Dette skal ændres således, at føleren i fjernbetjeningen benyttes istedet.


Vælg menupunktet *Indoor Unit Option* vælges

1. Vælg herefter undermenupunktet *Temperature sensor selection*
2. Vælg dernæst *Wired remote controller*

## **Additional functions of the Wired Remote Controller [See the image**

- 1 If you want to use the various additional functions for your Wired Remote Controller, press the  and  buttons at the same time for more than 3 seconds.
  - The password entry screen appears.
- 2 Enter the password, "0202," and then press the **OK** button.
  - The settings screen for installation/service mode appears.
- 3 See the list of additional functions for the Wired Remote Controller on the next page, and then select the desired menu.
  - Once you have entered the setting screen, the current setting appears.
  - Refer to the chart for data setting.
  - Using the   buttons, change the settings and press the  button to move to the next setting.
  - Press the **OK** button to save the new setting.
  - Press the  button to move to the Home screen.

### **NOTE**

- While setting the data, you can press the  button to move to the Home screen after checking the saving status at a pop-up screen.

Major	Step1	Step 2	Step 3	Description	Default
General	Indoor Unit option	Power button	-	Default/Indoorunit & Ventilation	Indoorunit & Ventilation
		Auto mode	-	ON/OFF	ON
		Cool/Heat selection	-	Cool Only/Cool & Heat	Cool & Heat
		Wireless remote controller	-	ON/OFF	ON
		MAIN/SUB wired remote	-	Master/Slave	Master
		Temperature unit	Temperature unit	Celsius (°C)/Fahrenheit (°F)	Celsius(°C)
			Set temp. Unit	Celsius (°C):1°C/0.5°C/0.1°C, Fahrenheit (°F): 1°F	1°C
		Temperaturesensor selection	-	Indoor/Wired remote controller	Indoor
		Average temperature	-	ON/OFF	OFF
		Set Temperature Type	-	ON/OFF	ON
	Connection Information	Number of Connection	Indoor	0 to 16	-
			Ventilator	0 to 16	-

### Step 3: Kalibrering af føler:

Tryk på "tilbage pilen" to gange for at komme tilbage på forsiden af menuen for *Service mode*.

1. Vælg nu menuen **Indoor**
2. Vælg herefter undermenuen **Room Temperature Calibration** for at aflæse betjeningsens *reference værdi* samt indstille den ønskede *kalibrerede værdi*

Major	Step1	Step 2	Step 3	Description	Default
Indoor	Blade lock 4)*	Bladel	-	Unlock/Lock	Unlock
		Blade2	-	Unlock/Lock	Unlock
		Blade3	-	Unlock/Lock	Unlock
		Blade4	-	Unlock/Lock	Unlock
	Room Temperature Calibration	Reference temperature	-	-9 to 40°C	-
		Calibration value	-	-9.9 to 9.9°C	0°C
	Indoor unit status information	Central control	-	ON/OFF	-
		Drain pump	-	ON/OFF	-
		Electric heater	-	ON/OFF	-
		Hot water coil	-	ON/OFF	-
		External control	-	ON/OFF	-
		RPM compensation	-	ON/OFF	-
		Filter replacement cycle	-	2000 hr/1000 hr	-